

EnvisaLink 3

Quick-Start Manual



Power Draw: 65mA

To Connect The Module To The Control Panel

*Note: Before installing record the 12 digit ID from the sticker on the module. You will need it during activation.

1. Disconnect power from the panel.
2. Connect the module to the Keypad bus terminals of the panel. *Caution do not connect the module to the Tip/Ring terminals or you may damage the device.*
3. Connect an 8-conductor (not supplied) UTP cable with an RJ-45 connector to an available router, switch or hub port with a DHCP server available.
4. Restore power to the system.

NOTE: On DSC systems the EnvisaLink 3 automatically enrolls with the security system as a PC5400/DVACS module

Panel Programming (Only for Vista panels. Not required for DSC panels)

1. Please find the latest instructions at <http://www.eyezon.com/EZMAIN/evl3honeywell.php>

EnvisaLink Local Access

1. To access the web interface on the module, from a browser on the same internal network type "envisalink" or the IP address of the module.
2. The default user name is "user" and the default password is "user"

ESP Plug-In For Website & Mobile Access

1. Visit www.eyezon.com from any web-enabled device.
2. If you do not have an account proceed to this link <http://www.eyezon.com/EZMAIN/createaccount.php> and follow the instructions. You will receive a confirmation e-mail with log-in credentials.
3. Log-in to your account.
4. Click the "Activate New Device" link on the left side of the page.
5. Choose EnvisaLink 3 as the device type.
6. When prompted enter the type of panel your EnvisaLink 3 is attached to.
7. When prompted enter the 12-digit ID and name your device.
8. Log-out. Wait 10 minutes. Log back in and your device will be activated.

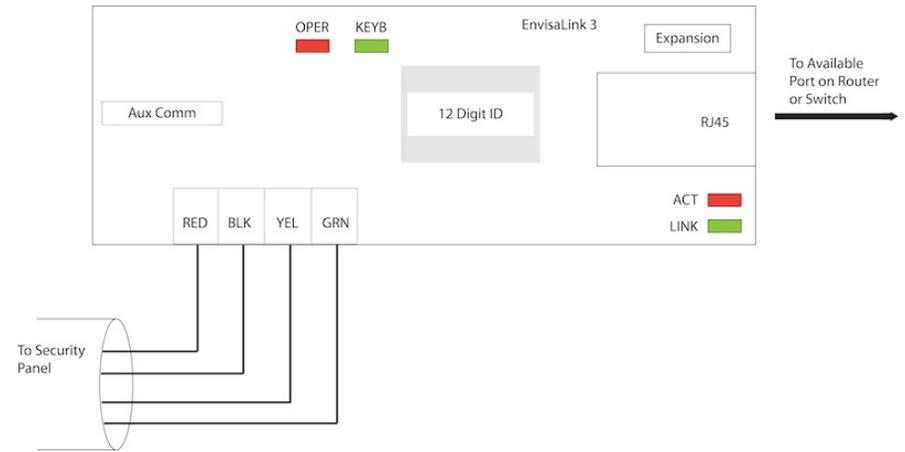


Table 1: LED Descriptions

Name	Color	Description
KEYB	GREEN	OFF - security system is not connected FLASHING - security system detected but device does not have an IP address SOLID - normal operation
OPER	RED	OFF - system is not powered FLASHING - normal operation SOLID - hardware fault
ACT	RED	FLASHING - ethernet activity. Incoming packets only
LINK	GREEN	OFF - no ethernet link. ON - ethernet link established

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

** PowerSeries is a Trademark of Digital Security Controls.*

** Vista is a Trademark of Honeywell*