

# Envisacor EnvisaLink IP170D Quickstart Manual



## Installation Instructions

**Power Draw: 65mA**

### Terminal Connections

**KEYBUS** - The 4-wire KEYBUS connection is used by the panel to communicate with the module. Connect the RED, BLK, YEL, and GRN terminals on the device to the corresponding terminals on a PowerSeries™\* panel.

**RJ45** - Requires an 8-conductor UTP cable with an RJ-45 connector on the end. This cable is required to plug into an available port on the router or other DHCP serving network device.

### To Connect The Module To The Control Panel

1. Disconnect power from the panel.
2. Connect the module to the Keybus terminals of the panel.
3. Connect an 8-conductor (not supplied) UTP cable with an RJ-45 connector to an available router, switch or hub port with a DHCP server available.
4. Restore power to the system.


NOTE: The Envisalink IP100D automatically enrolls with the security system as a PC5400/DVACS module

### WEBSITE & REMOTE ACCESS

1. Visit [www.eyez-on.com](http://www.eyez-on.com) from any web-enabled device.
2. If you do not have an account proceed to this link <http://www.eyez-on.com/EZMAIN/createaccount.php> and follow the instructions. You will receive a confirmation e-mail with log-in credentials.
3. Once you have an Eyez-On account, access the module locally using the "Local Access" instructions below.
4. Click the "Activate" link near the bottom of the page.
5. You will be prompted to log in to your account.
6. Once logged-in, follow instructions for registering the device.

### LOCAL ACCESS

1. To access the web interface on the module, from a browser on the same internal network type "envisalink" or the IP address of the module.
2. The default user name is "user" and the default password is "user"

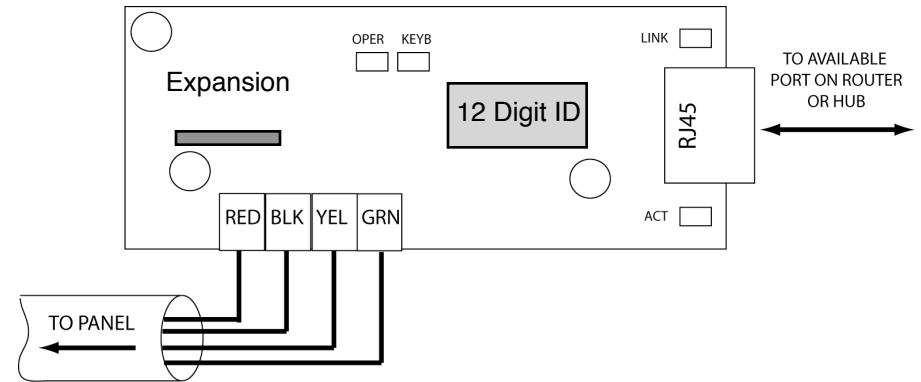

**Table 1: LED Descriptions**

Name	Color	Description
<b>KEYB</b>	<b>GREEN</b>	<b>OFF</b> - security system is not connected <b>FLASHING</b> - security system detected but device does not have an IP address <b>SOLID</b> - normal operation
<b>OPER</b>	<b>RED</b>	<b>OFF</b> - system is not powered <b>FLASHING</b> - normal operation <b>SOLID</b> - hardware fault
<b>ACT</b>	<b>RED</b>	<b>FLASHING</b> - Ethernet activity. Incoming packets only
<b>LINK</b>	<b>GREEN</b>	<b>OFF</b> - no Ethernet link. <b>ON</b> - Ethernet link established

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.*

\* PowerSeries is a Trademark of Digital Security Controls.